


8b. Worm Gear Housing Comp. - Five Start 3162166380

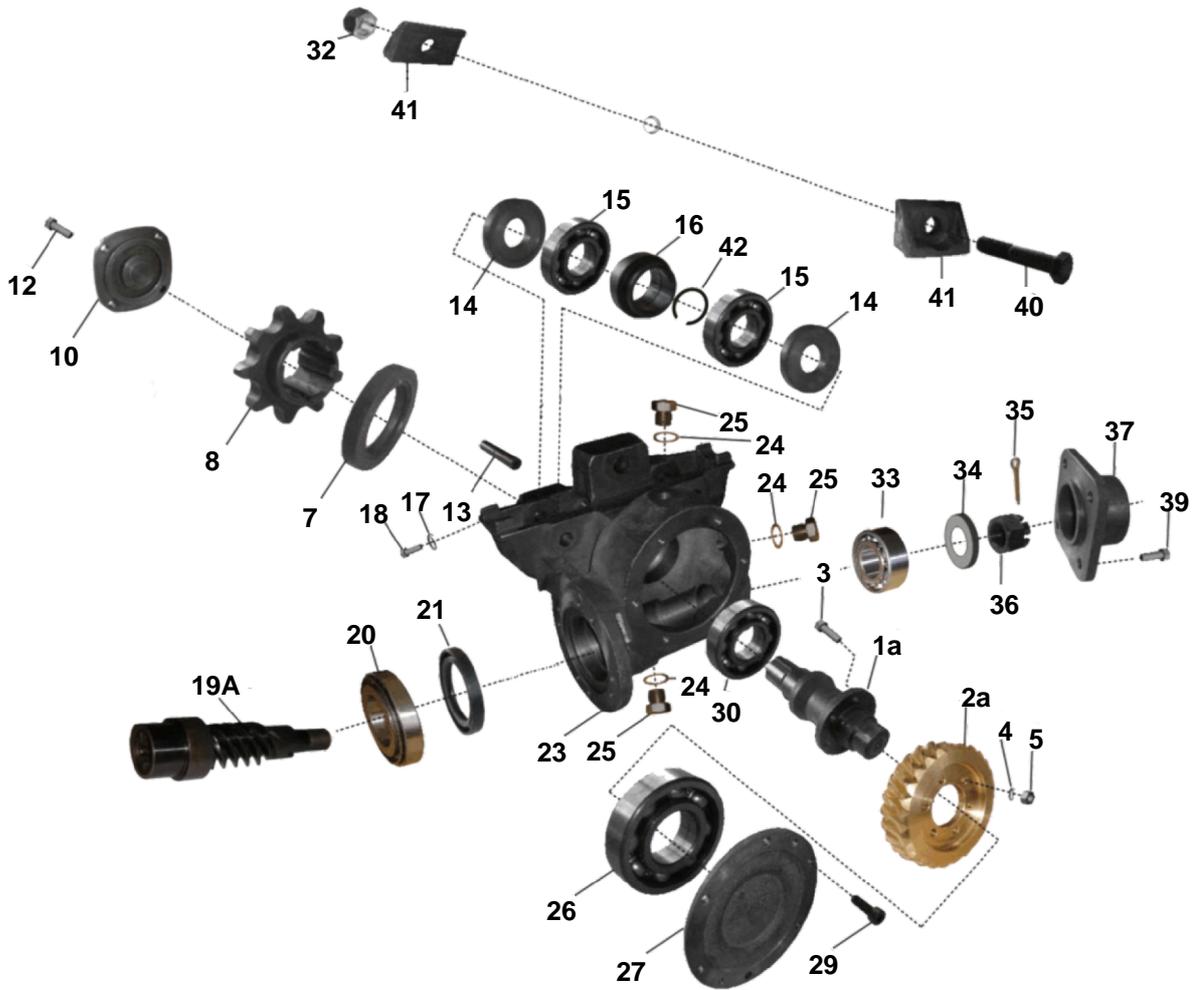

8b. Worm Gear Housing Comp. - Five Start 3162166380 Mining Equipments

No.	Description	Modified		Ref. Part No.	QTY
–	Worm Gear Housing Complete - Five Start (1-27)			3162166380	1
1a & 2a	– Shaft Complete with Worm Gear - Five Start			3162166780	1
1a	– Shaft only for Five start			3162166700	1
2a	– Worm Gear, Five Start (Bronze Repair 2a)			3162166700*	1
3	– Bolt			3162048100	6
4	– Spring Washer				6
5	– Nut (Modified)		*	M100085	6
7	– Seal Ring			0666439300	1
8	– Sprocket			9718351200	1
10	– Cover			3162047700	1
12	– Screw			0147132500	4
13	– Shaft			3162155100	2
14	– Washer			3162158100	4
15	– Ball Bearing			0502222900	4
16	– Pulley Wheel			9718351300	2
17	– Spring Washer			0333213000	2
18	– Stop Screw			3162009700	2
19A	– Worm Shaft, Five Start			3162166400	1
20	– Ball Bearing			0502111000	1
21	– Seal Ring			0666443200	1
23	– Gear Housing			3162166300	1
24	– Gasket			0653111500	3
25	– Plug			0686370300	3
26	– Ball Bearing			0502210700	1
27	– Cover			3162048600	1
29	– Screw			0147132500	6
30	– Ball Bearing			0502110900	1
32	– Nut			0266111600	1
33	– Ball Bearing			0504210500	1
34	– Washer			0301220400	1
35	– Split Pin			0111144900	1
36	– Nut			3162048400	1
37	– Cover			3162048500	1
39	– Screw			0147132500	4
40	– Bolt			3162106800	1
41	– Clamp			3162119900	2
42	– Circlip Int.				2

Note : Reference Part Number Starting With 'M' - Is Modified.